

SL T2™ MESH FACE SHIELD

ENGINEERED PROTECTION THAT SURROUNDS

The SL T2 Wire Mesh Face Shield is a versatile companion for the SL T2 Safety Helmet, designed to enhance safety and comfort in demanding work environments. Its mesh design ensures optimal air circulation, making it ideal for conditions with smoke and flying debris. Effortlessly attaches to the SL T2 Safety Helmet for added convenience and protection.



FEATURES

ADVANCED AIR CIRCULATION: Wire Mesh design allows for excellent air circulation without compromising protection from potential hazards, making it ideal for use in conditions with smoke and flying debris.

ENHANCED SAFETY: Constructed from robust materials, the shield frame and adapter protect and support face shield.

USER-FRIENDLY DESIGN: Ratchet clips make visor adjustments intuitive and efficient.

EFFORTLESS ATTACHMENT: Attach and detach the face shield with ease, thanks to its quick-release/connect clip design that ensures a snug and secure fit every time.

ENGINEERED TOUGHNESS: Meets ANSI/ISEA Z87.1-2020 requirements.

i HPT2FVM60 sold separately from the SL T2 Safety Helmet.



TOOLS AT YOUR FINGERTIPS

Learn more about the SL T2 Helmet and Accessories

SL T2™ WIRE MESH FACE SHIELD

ENGINEERED PROTECTION THAT SURROUNDS

The SL T2 Wire Mesh Face Shield is a versatile companion for the SL T2 Safety Helmet, designed to enhance safety and comfort in demanding work environments. Its mesh design ensures optimal air circulation, making it ideal for conditions with smoke and flying debris. Effortlessly attaches to the SL T2 Safety Helmet for added convenience and protection.

MESH FACE SHIELD

HPT2FVM60



MATERIALS

Screen: Iron Wire Mesh

Frame: ABS (Acrylonitrile Butadiene Styrene) Plastic
--

⚠ WARNING: Cancer and Reproductive Harm –P65Warnings.ca.gov

GENERAL SPECIFICATIONS

Weight: 140g

Overall Length: 227mm

Overall Width: 133mm

MARKINGS

Standard: ANSI/ISEA Z87.1-2020

Product markings may vary // Updated as of 05.24

INSTRUCTIONS

TO ATTACH FACE SHIELD TO HELMET

1. Push the clips into the front side accessory slots until you hear a click indicating it's secure.

TO REMOVE FACE SHIELD FROM CLIPS

1. Press the button labeled "PUSH" at the top of the clip.
2. Pull the shield out of the clip.

TO REMOVE CLIPS FROM HELMET

1. Simply pull up on the clips to detach them from accessory slots.

TO REMOVE FACE SHIELD FROM ADAPTER

1. Press the button labeled "PUSH" at the top of the clip.
2. Pull the shield out of the clip.