SL T2™ VISOR PROTECTOR

ENGINEERED PROTECTION THAT SURROUNDS

The SLT2 Visor Protector is a game changer in vison protection for the SLT2 Safety Helmet. Designed with durability and convenience in mind, this protector is the go-to solution for scratch free visors.



FEATURES

ENHANCED PROTECTION: Protects helmet visor from scratches and damage while not in use.

EFFORTLESS ATTACHMENT: Attach and detach the protector with ease over the visor.

8

HPT2PV sold separately from the SL T2 Safety Helmet.

MATERIALS

Lens: PC (Polycarbonate)

⚠ WARNING: Cancer and Reproductive Harm −P65Warnings.ca.gov

GENERAL SPECIFICATIONS

Weight: 63.6g
Overall Length: 226mm
Overall Width: 138mm
Lens Thickness: 1.8mm
PD: 64mm
Lens Base: 8.11mm
Vertical Lens Measurement: 98mm

INSTRUCTIONS

TO ATTACH VISOR PROTECTOR TO HELMET

- Align both ends of the protector over the attached visor clips in the accessory slots.
- 2. Firmly press the large mounting tab into the corresponding slot on the helmet to secure protector.

TO REMOVE VISOR PROTECTOR FROM HELMET

- 1. Pull both ends of the protector from the attached visor clips.
- 2. Firmly pull the large mounting tab from the helmet slot.



TOOLS AT YOUR FINGERTIPS

Learn more about the SL T2 Helmet and Accessories