
SL T2[™] PADDING

ENGINEERED PROTECTION THAT SURROUNDS

Ensure ongoing comfort and hygiene in demanding work environments with the SL T2 Replacement Padding designed for the SL T2 Safety Helmet. This complete set includes crown, front and rear padding, allowing easy replacement when pads get dirty or sweaty.

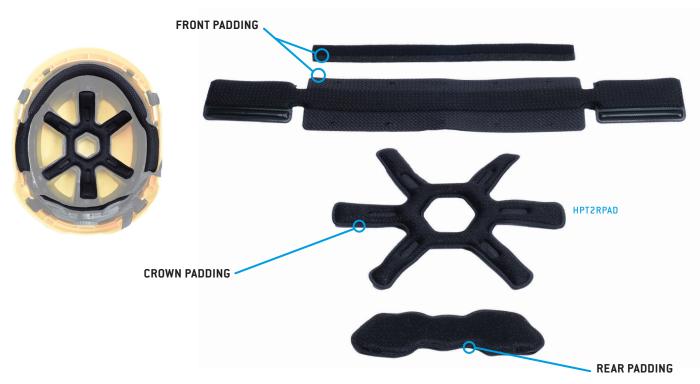

FEATURES

HYGIENIC SOLUTION: Enables wearer to effortlessly replace adirty or sweaty padding, promoting cleanliness and comfort. **ENHANCED COMFORT:** The padding set provides a comfortable fit and reduces pressure points during extended wear. **DURABLE CONSTRUCTION:** Made from high-quality materials, the padding set is built to withstand daily use.

INSTRUCTIONS

TO REPLACE CROWN PADDING ON HELMET

- 1. Pull the existing pad out of the helmet using the hook and loop tabs.
- 2. Align the circle of the new pad with the circle at the top of the helmet.
- 3. Firmly press down each "arm" onto the hook and loop tab to secure the pad in place.

TO REPLACE FRONT PADDING ON SUSPENSION

- 1. Detach hook and loop connections above the ear.
- 2. Firmly detach the pegs of the sweatband from the front suspension.
- 3. Pull the sweatband out from under the suspension and out of the helmet.
- 4. Align new sweatband with front of suspension.
- 5. Press pegs into place and wrap hook and loop closures around the suspension near the ears.

TO REPLACE REAR PADDING ON SUSPENSION

- 1. Remove both ends of the padding from around the suspension.
- 2. Pull the pad away from suspension.
- 3. Align both ends of the new padding around the suspension's sides.
- 4. Press the pad into the hook and loop connection point.



TOOLS AT YOUR FINGERTIPS

Learn more about the SL T2 and Accessories

PYRAMEX° 🔌 🖬 🕶 🗢 0 🙃 🌤 🖄

P 800.736.8673 // F 901.861.4967 // W PYRAMEX.COM